

LensCoat® Sigma 70-200 f2.8 DG OS HSM Sports INSTRUCTIONS

Piece 1- Lens Hood Cover

Remove the lens hood cover from the lens. Carefully slide and stretch the lens cover into place lining up the scalloped sections.

Remove lens foot for easier placement of sections 2-6

Piece 2

With the lens hood removed, stretch and slide piece 2 down from the glass to just above the focus ring, lining up the window with the distance scale.

Piece 3

Slide piece 3 over the lens onto the zoom ring.

Piece 4

Slide piece 4 over the lens to just before the zoom ring

Piece 5

Slide piece 5 over the lens and onto the focus ring.

Piece 6

Slide piece 6 down the lens aligning the distance scale window and focus mode/OS and limiting switches. For final placement pull the window slightly away from the lens and adjust to the left or right. **You should be able to slide the controls through the plastic window with your finger. Some people like to punch small holes in the plastic to allow for easier access. If you choose to do this be careful as it is easy to destroy the window.

Piece 7

Slide on piece on the last section of the lens.

Rotating Lens Collar

The LensCoat[®] Sigma 70-200 Sports lens cover kit includes an optional strip of neoprene with adhesive tape applied to the back for the rotating lens collar. Cutout the desired length for the parts of the lens collar you want to cover. Cut the longest piece first. After all the cutting is done then remove the adhesive tape backing by carefully folding back a small corner and apply to the lens collar.

LensCoat.com[®] 80 Throckmorton Street Freehold, NJ 07728