



LensCoat® Nikon AF-S 120-300 f/2.8E FL SR VR INSTRUCTIONS

Piece 1- Lens Hood Cover

Remove the lens hood cover from the lens. Piece 1 has a hole at one end of the cover to accommodate for the lens hood locking knob. Carefully slide and stretch the lens cover into place without putting too much stress on the lock knob hole.

Remove the tripod mount foot from the rotating lens collar. This will allow for easy installation of pieces 2-7. You can also put sections 2-7 on by looping the pieces around the lens foot and over the top of the lens where it mounts to the camera. When looping the pieces around the lens foot remember to invert them so they have the correct orientation once flipped over the lens.

Piece 2

Stretch and slide piece 2 down the lens to just after the zoom ring.

Piece 3

Slide piece 3 down the lens to the zoom ring.

Piece 4

Carefully slide piece 4 it down the lens just before the zoom ring and after the focus ring.

Piece 5

Slide piece 5 it down to the focus ring.

Piece 6

Carefully slide piece 6 it down the lens lining up the windows for and AF/VR controls and distance scale. **For final placement pull the window for the slightly away from the lens and adjust to the left or right.**

Piece 7

Slide the elastic around the rotating collar lining up the hole for the tension and the cut out for the lens strap.

Piece 8

Slide on piece 8 by aligning the alignment hole with the alignment mark on the lens.

LensCoat.com®
80 Throckmorton Street
Freehold, NJ 07728