



LensCoat® Canon 300IS f/2.8 INSTRUCTIONS

Piece 1- Lens Hood Cover

Remove the lens hood cover from the lens. Piece 1 has a ¼ inch hole at one end of the cover seam to accommodate for the lens hood locking knob. Carefully slide and stretch the lens cover into place without putting too much stress on the lock knob hole.

Remove the tripod mount foot / rotating lens collar from the lens. This will allow for easy installation of pieces 2 and 3.

Piece 2

After removing the tripod mount foot /rotating collar, slide piece 2 down below the focus recall ring, tapered side towards the camera.

Piece 3- IS and Distance scale window

Slide piece 3 on by **carefully lining up the IS and distance scale windows and slide into place being careful not to get the plastic windows caught on the rotating collar knob or strap attachment. For final placement pull the distance scale window slightly away from the lens and adjust to the left or right.**

****You should be able to slide the controls through the plastic window with your finger. Some people like to punch small holes in the plastic to allow for easier access. If you choose to do this, be careful as it is easy to destroy the window**

Piece 4

Slide on piece 4 by lining up the 1/8 hole to the lens mount mark (red dot) on the lens being careful not to pull/stretch the hole too much to prevent tears.

Rotating Lens Collar

The LensCoat® 300 lens cover kit includes a 13 inch strip of neoprene with adhesive tape applied to the back. Cut out the desired length for the parts of the lens collar you want to cover. Cut the longest piece first. After all the cutting is done then remove the adhesive tape backing by carefully folding back a small corner and apply to the lens collar.

LensCoat.com®
80 Throckmorton Street
Freehold, NJ 07728