



LensCoat® Nikon 300mm f/4 PF ED VR INSTRUCTIONS

Piece 1- Lens Hood Cover

Remove the lens hood cover from the lens. Carefully slide and stretch the lens cover into place.

Piece 2

Stretch and slide piece 2 down the lens to just after the focus ring.

Piece 3

Slide piece 3 down the lens to just to the focus ring.

Piece 4

Carefully slide piece 5 down the lens lining up the distance scale and AF/VR control window. **For final placement pull the window for the slightly away from the lens and adjust to the left or right.**

***if you are using the rotating collar then use the smaller 4b for the AF/VR control section and use piece 5.**

Piece 5

Only use this piece with the rotating collar on. Slide on piece 5 by aligning the alignment hole with the alignment mark on the lens. If you are not using the rotating collar then use piece 4 instead.

Rotating Lens Collar

The LensCoat® Nikon 300 f/4 VR lens cover kit includes a strip of neoprene with adhesive tape applied to the back for use with the rotating lens collar (which does not come with the lens). Cut the desired length for the parts of the lens collar you want to cover. Cut the longest piece first. After all the cutting is done then remove the adhesive tape backing by carefully folding back a small corner and apply to the lens collar.

LensCoat.com®
80 Throckmorton Street
Freehold, NJ 07728