

LensCoat® Nikon 300VR/VRII INSTRUCTIONS

Piece 1 - Lens Hood Cover

Remove the lens hood cover from the lens. Piece 1 has a ¼ inch hole at one end of the cover seam to accommodate for the lens hood locking knob. Carefully slide and stretch the lens cover into place without putting too much stress on the lock knob hole.

Piece 2

With the lens hood removed, stretch and slide piece 2 down from the glass to just above the focus ring, tapered side towards the camera. This piece can also be put on by looping it around the lens foot and sliding down the lens.

Piece 3

Slide piece 3 down to the focus ring if you would like to cover the focus ring.

Piece 4

Loop piece 4 over the lens foot and around the back of the lens and carefully slide it down the lens aligning the focus scale, focus mode and limiting switches. For final placement, pull the distance scale window slightly away from the lens and adjust to the left or right.

**You should be able to slide the controls through the plastic window with your finger. Some people like to punch small holes in the plastic to allow for easier access. If you choose to do this, be careful as it is easy to destroy the window

Piece 5

Loop piece 5 over the lens foot around the back of the lens and just past the rotating lens collar

Piece 6

Piece 6 has a small hole to accommodate for the filter knob. Carefully slide and stretch piece 5 over the last segment of the lens without putting to much stress on the hole itself.

Rotating Lens Collar

The LensCoat® Nikon 300VR/VRII lens cover kit includes two strips of neoprene with adhesive tape applied to the back. One is for the lens collar and one can be used for the VR slide switch. Cut out the desired length for the parts of the lens collar you want to cover. Cut the longest piece first. After all the cutting is done then remove the adhesive tape backing by carefully folding back a small corner and apply to the lens collar.

LensCoat.com® 80 Throckmorton Street Freehold, NJ 07728