



LensCoat® Canon 300 f/2.8 IS II INSTRUCTIONS

Piece 1 - Lens Hood Cover

Remove the lens hood cover from the lens. Piece 1 has a ¼ inch hole at one end of the cover to accommodate for the lens hood locking knob. Carefully slide and stretch the lens cover into place without putting too much stress on the lock knob hole.

Removing the tripod mount foot on the rotating lens collar from the lens will allow for easier installation of pieces 2,3, and 4. If you choose not to remove the foot, you can carefully slip/stretch pieces 2, 3 and 4 around the foot.

Piece 2

Slide piece 2 down to just after the rotating lens collar.

Piece 3

Slide piece 3 down to the rotating lens collar.

Piece 4

Carefully slide it down the lens aligning the distance scale, IS controls and limiting switches. **For final placement, pull the distance scale window slightly away from the lens and adjust to the left or right. **You should be able to slide the controls through the plastic window with your finger. Some people like to punch small holes in the plastic to allow for easier access. If you choose to do this, be careful as it is easy to destroy the window**

Piece 5

Carefully slide it down the lens aligning the AF/MF switches. **For final placement, pull the distance scale window slightly away from the lens and adjust to the left or right.**

Rotating Lens Collar

The LensCoat® for the 300 f/2.8 IS II lens cover kit includes a strip of neoprene with adhesive tape applied to the back. Cut out the desired length for the parts of the lens collar you want to cover. Cut the longest piece first. After all the cutting is done then remove the adhesive tape backing by carefully folding back a small corner and apply to the lens collar.

LensCoat.com®
80 Throckmorton Street
Freehold, NJ 07728